



Enabling Industrial IoT



Siretta Routers

Quick Start Guide

Rev 1.2

Whats in the Box?

This quick start guide is intended for all Siretta routers.
For reference, we have used a QUARTZ-GW22-UMTS (EU) 3G router.

As standard, you will receive one of the following routers:



QUARTZ



QUARTZ-LITE



QUARTZ-COMPACT

Common Accessories

If you ordered a router with accessories, you will also receive the following items:




Ethernet Cable



Power Adaptor



**Cellular
Antenna**

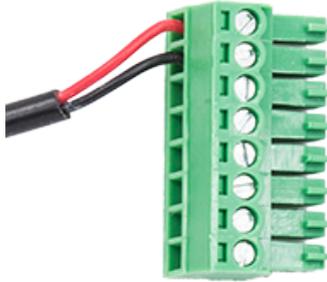

**Power Cable and Connector
(QUARTZ Series only)**



**DIN Rail Adaptor
(QUARTZ and QUARTZ-COMPACT
Series only)**



**The QUARTZ-LITE DIN Rail
adaptor does not come as a
standard part of the accessories
kit, but is available separately.
Please specify when ordering.**

NOTE - For LTE routers, the kit may be supplied with an additional cellular antenna. This means the router is capable of MIMO (Multiple Inputs, Multiple Outputs) cellular communication.

Optional Accessories

If you ordered a router with accessories and have opted for either WiFi and/or GPS variants, then you will also receive one or both of the following items:



WiFi Antenna

(For routers with WiFi option)



GPS Antenna

(For routers with GPS option)

Additional Items

You will require the following items for configuring your router:



- » 3G or 4G SIM card with APN details
- » Screwdriver to open the SIM cover
- » PC to configure the router

NOTE - Please ensure your antenna and SIM card are appropriate for the router you are using.

Step 1: SIM: Use a screwdriver to open the SIM cover on your router.



Step 2: SIM: Insert a SIM card fully into the SIM slot. Close the SIM cover, ensuring it is screwed back into place

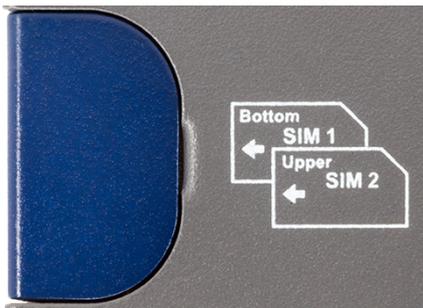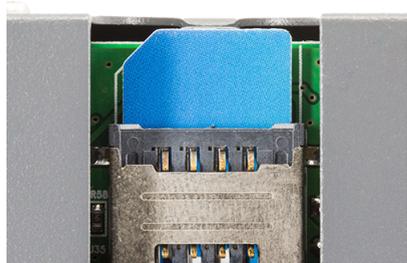


Step 3: ANTENNA CONNECTIONS: Screw the cellular antenna to the main antenna connector on the router. Twist the antenna connector clock-wise until the antenna is firmly connected.



If you have a WiFi router, connect the WiFi antenna to the WiFi antenna connector on the router.

If you have a GPS router, connect the GPS antenna to the GPS antenna connector on the router.

If you have an LTE router that has been supplied with a 2nd cellular antenna for MIMO, then attach this to the AUX connector on the router.

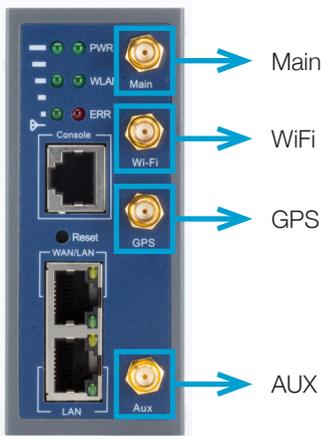

Step 4: LAN CONNECTION: Connect one end of the Ethernet cable into the router LAN port, connect the other end of the cable into an Ethernet port on your PC.



Step 5: POWER: For QUARTZ-LITE: Plug the plug-top power supply into your router using the 2.1mm centre pin connector.

For QUARTZ & QUARTZ-COMPACT: Plug the green power connector on the power adapter cable into the router as shown below. The example shown is for the QUARTZ model. A similar concept applies to the QUARTZ-COMPACT. Plug the 2.1mm centre pin connector from the plug-top power supply in to the other end of the power adapter cable.



Step 6: POWER: Select connector type for your power adaptor depending on your geographical location (UK/EU/USA/AU). Plug the power adaptor to the mains.



Step 7: POWER: Switch on the power. See table below for LED indications when router is powered on.

Table 1. Router LED indication


LED colour	State
PWR Green when ON	If this LED is OFF, ensure power adaptor is connected correctly and mains power is switched on.
WLAN Green when ON	Router WiFi is enabled. If this LED is OFF, WiFi is not enabled or supported.
ERR Red when ON	Router is not registered to the network. Check the SIM card is inserted correctly.
Signal Strength Green when ON	If only one LED is on, check the antenna position or try a different location.
Green LAN when ON	LAN cable is connected. If this LED is OFF, check both ends of the LAN cable are connected properly.

Step 8: IP ADDRESS: Obtain the IP address of your router. You can find this on the silver label on the back of your router. Type the IP address of your router into your PC browser. When prompted for your user name and password use the following:

User name: admin

Password: admin

These credentials are factory defaults. You can set your own user name and password in the router settings.

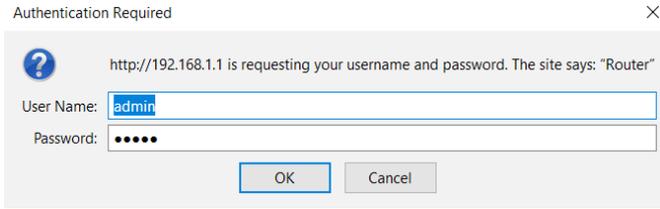

Authentication Required ×

 http://192.168.1.1 is requesting your username and password. The site says: "Router"

User Name:

Password:

Step 9: APN SET-UP: On successful login, navigate to the Basic Network > Cellular tab.

When you arrive at the 'Cellular Settings' page, you will need to enter the APN details for the network provider of your SIM card.

In the image below, we have used the APN details relevant for "EE". These being:

- APN: everywhere
- Username: eesecure
- Password: secure



You are not required to enter any 'Proxy' or 'Port' details.

Siretta
www.siretta.co.uk

Cellular Router

Cellular Settings Router

Cellular Network Type: MU709S:WCDMA/HSPA+

ICMP Check:

Cellular Traffic Check:

CIMI Send to: [] : []

SMS Code: []

Dual Sim: Sim 1 Only ▾

Sim 1 Mode: Auto ▾

Sim 1 PIN: []

Sim 1 APN: everywhere

Sim 1 Auth: Auto ▾

Sim 1 User: eesecure

Sim 1 Passwd: []

Save Cancel

Step 10: CONNECTING TO NETWORK: Click "Save". Your router will reboot itself. The router will then connect to the network and is ready for use with your application.

The screenshot displays the Siretta router's web interface. On the left is a blue sidebar with navigation options: Status, Overview, VPN, LAN, Device List, Basic Network, WLAN, Advanced Network, Firewall, VPN Tunnel, Administration, Debugging, and Logout. The main content area is titled 'System Status' and 'Internet Status'. The 'System Status' section shows Router Name (Router), Hardware Version (C11-D20), Firmware Version (Router-4.3.4.1), Router Time (Fri, 11 Jan 2019 09:38:39 +0000), Uptime (00:04:38), and Total / Free Memory (60.05 MB / 47.54 MB (79.15%)). The 'Internet Status' section shows Connection Type (Cellular Network), MAC Address (34:0A:82:27:21:15), Modem Type (3G-MU709S-WCDMA/HSPA+), Modem IMEI (869845023315839), Modem Status (Ready), USIM Select (USIM 1 Running), Cellular ISP (EE), Cellular Network (WCDMA), USIM Status (Ready), CSQ (13 - (41%)), IP Address (10.136.164.140), Subnet Mask (255.255.255.255), Gateway (10.64.64.64), and DNS (10.4.0.240:53, 10.4.0.230:53). A blue circle highlights the 'Connection Status' field, which is set to 'Connected'.

System Status	
Router Name	Router
Hardware Version	C11-D20
Firmware Version	Router-4.3.4.1
Router Time	Fri, 11 Jan 2019 09:38:39 +0000 <input type="button" value="Clock Sync"/>
Uptime	00:04:38
Total / Free Memory	60.05 MB / 47.54 MB (79.15%)

Internet Status	
Connection Type	Cellular Network
MAC Address	34:0A:82:27:21:15
Modem Type	3G-MU709S-WCDMA/HSPA+
Modem IMEI	869845023315839
Modem Status	Ready
USIM Select	USIM 1 Running
Cellular ISP	EE
Cellular Network	WCDMA
USIM Status	Ready
CSQ	13 - (41%)
IP Address	10.136.164.140
Subnet Mask	255.255.255.255
Gateway	10.64.64.64
DNS	10.4.0.240:53, 10.4.0.230:53
Connection Status	Connected
Connection Uptime	00:03:45
Main Card Lease Time
Back Card Lease Time

NOTE - If you cannot access the router GUI, please check your local area network settings.

Further Information

For more information when using your router, a range of application notes, hardware and software user manuals are available to download. You can request these from your Siretta representative, alternatively these can be downloaded from www.siretta.com



Enabling Industrial IoT

sales +44 (0)118 976 9000

email sales@siretta.com

www.siretta.com

Siretta Ltd
Basingstoke Road
Spencers Wood
Reading
Berkshire
RG7 1PW
United Kingdom

Company No. 08405712
VAT Registration No. GB163 04 0349



Rev 1.2